MAINTENANCE SCHEDULE RAM 1500 3.0 ECODIESEL

MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator	√	✓	√	√	~	√	√	√	√	√	~	✓	√	~
Required Inspections														
Refill DEF if necessary	\checkmark	√	\checkmark	√	√	\checkmark	\checkmark	√	√	√	√	√	\checkmark	√
Rotate the tyres	1	√	-	-	√	1	1	-	√	1	1	1	\checkmark	-
Inspect and clean engine air filter	\checkmark	√	1	1	√	1	1	-	√	\checkmark	√	\checkmark	1	-
Inspect the brake pads	\checkmark	√	1	1	√	1	1	-	√	\checkmark	√	\checkmark	1	-
Inspect and adjust parking brake	1	√	1	-	√	1	1	-	√	\checkmark	1	√	1	-
Inspect drive belt; replace as necessary	\checkmark	√	1	-	√	1	1	-	√	\checkmark	√	\checkmark	1	-
Required Maintenance														
Replace engine air filter element		√		√		√		√		\checkmark		√		√
Replace engine fuel filter element		√		-		1		-		1		1		-
Replace drive belt								\checkmark						
Carry out brake fluid flush		√		\checkmark		1		\checkmark		\checkmark		1		-
Replace transfer case fluid								-						
Replace diff oils		√		-		1		-		√		√		-
Replace automatic transmission fluid and sump filter 8 Speed								√						
Flush and replace engine coolant									\checkmark					
LABOUR HOURS	2	4	2	4	2	4	2	6	3	4	2	4	2	4





ROUTINE SERVICE

MONTHS	12	24	36	48	60	72	84	96	108	
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	1
Additional Inspections Items										
Fill windshield washer fluid reservoir	√	✓	√	√	√	√	√	✓	~	
Check function of all interior and exterior lights	√	√	1	√	√	√	-	√	 Image: A second s	
Check tyre pressure and look for unusual wear or damage.		√	√	√	√	√	~	√	~	
Inspect the battery and clean and tighten terminals as required. Attach battery test report	√	~	~	~	~	~	~	~	~	
Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and automatic transmission and fill as needed	~	~	~	~	~	~		~	~	
Inspect the CV/Universal joints		 Image: A set of the set of the	√	~	~	√	√	 Image: A set of the set of the	 Image: A set of the set of the	
Inspect the brake pads, shoes, rotors, drums, and hoses	√	√	-	√	√	√	-	√	√	
Inspect the engine cooling system protection and hoses	√	 Image: A set of the set of the	√	 Image: A start of the start of	√	√	-	 Image: A start of the start of	√	
Inspect the exhaust system	√	 Image: A start of the start of	√	 Image: A start of the start of	√	√	-	 Image: A start of the start of	√	
Inspect front and rear suspension, tie rod ends, and replace if necessary	•	~	√	~	~	~	~	√	~	
Inspect the front and rear axle surfaces. If gear oil leakage is suspected, check the fluid level.		~	√	~	~	~	-	~	√	
Inspect and adjust parking brake, as necessary	-	√	-	√	√	√	-	√	-	



