

# MAINTENANCE SCHEDULE



MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
<i>Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Required Inspections</b>														
<i>Refill DEF if necessary</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Rotate the tires</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Lubricate front drive shaft fitting</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect and clean engine air filter. Replace if necessary</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect the brake linings</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect and adjust parking brake</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect drive belt; replace as necessary</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Required Maintenance</b>														
<i>Replace engine air filter element</i>		✓		✓		✓		✓		✓		✓		✓
<i>Replace engine fuel filter element</i>		✓		✓		✓		✓		✓		✓		✓
<i>Carry out EGR clean</i>			✓			✓			✓				✓	
<i>Replace drive belt ONLY</i>		✓		✓		✓		✓		✓		✓		✓
<i>Carry out brake fluid flush</i>		✓		✓		✓		✓		✓		✓		✓
<i>Replace drive belt and pulleys</i>								✓						
<i>Change the transfer case fluid</i>								✓						
<i>Replace diff oils</i>		✓		✓		✓		✓		✓		✓		✓
<i>FOR TOWING Change the automatic transmission fluid and sump filter 8 Speed</i>						✓						✓		
<i>Change the automatic transmission fluid and sump filter 8 Speed</i>						✓						✓		
<i>Flush and replace power steering fluid</i>							✓							
<i>Flush and replace engine coolant</i>										✓				
<b>LABOUR HOURS</b>	<b>1.5</b>	<b>2.5</b>	<b>3</b>	<b>2.5</b>	<b>1.5</b>	<b>3.5</b>	<b>1.5</b>	<b>4.5</b>	<b>3.5</b>	<b>3.5</b>	<b>1.5</b>	<b>5.5</b>	<b>2</b>	<b>3.8</b>

