

# MAINTENANCE SCHEDULE

## RAM 2500 6.4 HEMI



MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Required Inspections</b>														
Rotate the tyres	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Lubricate front drive shaft fitting	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect and clean engine air filter. Replace if necessary	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect the brake linings	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect and adjust parking brake	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect drive belt; replace as necessary	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Required Maintenance</b>														
Replace engine air filter element		✓		✓		✓			✓			✓		
Carry out brake fluid flush. Brake fluid is time based ONLY - mileage intervals do not apply				✓				✓				✓		
Replace spark plugs										✓				
Change the transfer case fluid				✓				✓				✓		
Replace diff oils		✓		✓		✓		✓		✓		✓		✓
Replace drive belt			✓			✓			✓			✓		
Change the automatic transmission fluid and sump filter 8 Speed								✓						
Replace Crankcase Ventilation Filter (CCV) at 10 year or 120,000km (whichever comes first)												✓		
Flush and replace power steering fluid							✓							
Flush and replace engine coolant at 10 year or 108,000km (whichever comes first)									✓					
<b>LABOUR HOURS</b>	<b>1.5</b>	<b>2.5</b>	<b>2</b>	<b>3</b>	<b>1.5</b>	<b>3.5</b>	<b>1.5</b>	<b>4.5</b>	<b>2.5</b>	<b>3.8</b>	<b>1.5</b>	<b>3</b>	<b>2.5</b>	<b>2.5</b>

