

MAINTENANCE SCHEDULE

RAM 2500/3500 6.7 CUMMINS



| | MONTHS | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | 132 | 144 | 156 | 168 |
|--|---------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| | OR KILOMETRES | 12K | 24K | 36K | 48K | 60K | 72K | 84K | 96K | 108K | 120K | 132K | 144K | 156K | 168K |
| <i>Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Required Inspections | | | | | | | | | | | | | | | |
| <i>Refill DEF if necessary</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Rotate the tyres</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Lubricate front drive shaft fitting</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Inspect and clean engine air filter. Replace if necessary</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Inspect the brake linings</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Inspect and adjust parking brake</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| <i>Inspect drive belt; replace as necessary</i> | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Required Maintenance | | | | | | | | | | | | | | | |
| <i>Replace engine air filter element</i> | | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ |
| <i>Replace both fuel filter elements</i> | | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ |
| <i>Carry out brake fluid flush</i> | | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ |
| <i>Replace drive belt</i> | | | | | | | | | ✓ | | | | | | |
| <i>Replace the transfer case fluid</i> | | | | | ✓ | | | | ✓ | | | | ✓ | | |
| <i>Replace diff oils</i> | | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ |
| <i>Replace automatic transmission fluid and filter(s)</i> | | | | | ✓ | | | | ✓ | | | | ✓ | | |
| <i>Replace Crankcase Ventilation Filter (CCV)</i> | | | | | | | | | | ✓ | | | | | |
| <i>Flush and replace power steering fluid</i> | | | | | | | | | | | | | | ✓ | |
| <i>Flush and replace engine coolant</i> | | | | | | | | | | | ✓ | | | | |
| LABOUR HOURS | | 2 | 5 | 2 | 6 | 2 | 5 | 2 | 7 | 3 | 5 | 2 | 6 | 3 | 5 |

