

MAINTENANCE SCHEDULE



MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
<i>Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Required Inspections														
<i>Refill DEF if necessary</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Rotate the tyres</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Lubricate front drive shaft fitting</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect and clean engine air filter. Replace if necessary</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect the brake linings</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>Inspect and adjust parking brake</i>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Required Maintenance														
<i>Replace engine air filter element</i>		✓		✓		✓		✓		✓		✓		✓
<i>Replace engine fuel filter element</i>		✓		✓		✓		✓		✓		✓		✓
<i>Replace chassis mounted fuel filter element</i>		✓		✓		✓		✓		✓		✓		✓
<i>Carry out brake fluid flush</i>		✓		✓		✓		✓		✓		✓		✓
<i>Replace drive belt</i>			✓			✓			✓			✓		
<i>Replace drive belt, pulley & fan bearing</i>												✓		
<i>Change the transfer case fluid</i>				✓				✓				✓		
<i>Replace transfer case fluid if towing</i>				✓				✓				✓		
<i>Replace diff oils</i>		✓		✓		✓		✓		✓		✓		✓
<i>Change automatic transmission fluid (AS69RC transmission only)</i>				✓				✓				✓		
<i>Change the automatic transmission fluid and sump filter (AS69RC transmission only)</i>								✓						
<i>Change automatic transmission fluid and filter(s) if towing (68RFE transmission only)</i>								✓						
<i>Change automatic transmission fluid and filter(s)</i>								✓						
<i>Replace Crankcase Ventilation Filter (CCV)</i>									✓					
<i>Flush and replace power steering fluid</i>													✓	
<i>Flush and replace engine coolant</i>										✓				
LABOUR HOURS	1.5	2.8	2.5	3.5	1.5	3.8	1.5	6	2.5	3.8	1.5	5.5	1.8	2.8

