MAINTENANCE SCHEDULE FORD F-150 PETROL



MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
Change engine oil and oil filter every 12km or 12 months, or as indicated by oil life indicator	✓	√	✓	✓	✓	√	√	✓	✓	✓	✓	√	✓	✓
Required Inspections														
Rotate the tyres	√	√	✓	✓	√	√	√	√	√	√	√	√	√	✓
Inspect and clean engine air filter	✓	√	√	√	√	√	√	√	√	√	√	√	√	✓
Inspect the brake pads	✓	√	✓	√	√	√	√	√	√	√	√	√	√	✓
Inspect and adjust parking brake	✓	√	✓	√	✓	√	√	√	√	√	√	√	√	✓
Inspect drive belt; replace as necessary	✓	1	√	1	√	√	√	1	1	√	√	✓	√	✓
Required Maintenance														
Replace engine air filter element		√		✓		√		✓		✓		√		✓
Carry out brake fluid flush. Brake fluid is time based ONLY - mileage intervals do not apply		✓		✓		✓		✓		✓		✓		✓
Replace spark plugs										\				
Replace transfer case fluid										✓				
Replace diff oils										✓				
Replace serpentine fan belt.								1						
Replace automatic transmission fluid and sump filter 10 Speed										✓				
Flush and replace engine coolant at 10 year or 108,000km (whichever comes first)									✓					
LABOUR HOURS	2	3	2	3	2	3	2	4	3	8	2	3	2	3

ROUTINE SERVICE



MONTHS	12	24	36	48	60	72	84	96	108	120	132	144	156	168
OR KILOMETRES	12K	24K	36K	48K	60K	72K	84K	96K	108K	120K	132K	144K	156K	168K
Additional Inspections Items														
Fill windshield washer fluid reservoir	√	✓	✓	✓	✓	√	✓	✓	✓	✓	✓	√		✓
Check function of all interior and exterior lights	✓	✓	✓	✓	√	✓	✓	✓	✓	✓	√	✓	✓	✓
Check tyre pressure and look for unusual wear or damage.	√	√	√	✓	√	✓	√	√	✓	✓	√	√	✓	✓
Inspect the battery and clean and tighten terminals as required. Attach battery test report	√	√	√	√	✓	√	✓	√	✓	✓	√	√	✓	✓
Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and automatic transmission and fill as needed	✓			✓	✓	✓					✓	✓		✓
Inspect the CV/Universal joints	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect the brake pads, shoes, rotors, drums, and hoses	√	√	√	√	√	√	√	√	✓	✓	√	√	√	✓
Inspect the engine cooling system protection and hoses	√	√	√	√	√	√	√	√	✓	✓	√	√		✓
Inspect the exhaust system	√	✓	√	√	√	√	✓	✓	✓	✓	√	√		√
Inspect front and rear suspension, tie rod ends, and replace if necessary							√	√						
Inspect the front and rear axle surfaces. If gear oil leakage is suspected, check the fluid level.	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Inspect and adjust parking brake, as necessary	√	✓	✓	√	√	√	✓	✓	✓	✓	√	√	✓	